INSTALLATION GUIDELINES

STYLE No. OTPF20, OT20PF

On Tap Deck Mounted Articulated Pot Filler with Metal Wheel Handle

IMPORTANT:


- > To ensure this product is installed properly, you must read and follow these guidelines.
- > The owner/user of this product must keep this information for future reference.
- > This product must be installed by a professional licensed contractor and must be onsite prior to rough-in, this allows the installer to visualize the installation.
- > Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- > Inspect this product to ensure you have all the parts required for proper installation. Product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- > Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- > The use of certain plumber's putty may stain stone or tile surfaces.
- ➤ If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am 6pm EST.
- > Refer to the separate Service Parts Documents for available replacement parts.

TECHNICAL DETAILS:


DETAIL	SPECIFICATION
HANDLE TURN ANGLE	QUARTER TURN
INLET CONNECTION	3/8" COMPRESSION CONNECTION HOSES ‡
SPOUT SWIVEL	YES
SPOUT REACH	12-3/16" [309mm]
FLOW RATE	2.2gpm [8.3L/min]
WATER PRESSURE RANGE	20psi [1.5 bar] MINIMUM 85psi [6.2 bar] MAXIMUM
WATER PRESSURE RECOMMENDED	45psi [3.0 bar]

‡ UK Style No. OT20PF is supplied with 1 BSPP adapter, assembly required.

DIMENSION	VALUE
А	2" [51mm]
В	2-1/8" [54mm] MAX
С	3-1/8" [79mm] MIN

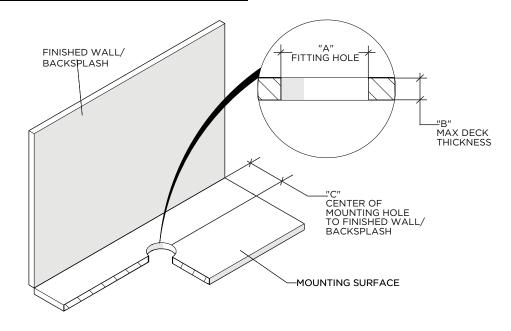


INSTALLATION GUIDELINES

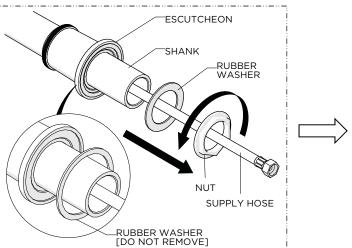


 Unthread and remove the NUT and RUBBER WASHER from the SHANK.


NOTE: Do **NOT** remove the RUBBER WASHER beneath the ESCUTHCEON

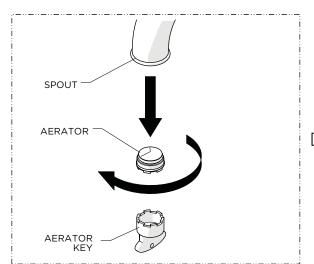

4. Using the TOOL provided, remove the AERATOR.

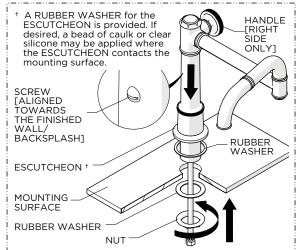

 Insert the SPOUT through the hole on the mounting surface making sure the SCREW on the SPOUT COLUMN is aligned towards the finished wall then using the RUBBER WASHER provided thread and securely tighten the NUT onto the SHANK.

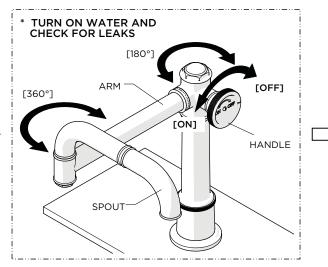


Turn on water and operate HANDLE and SPOUT to ensure they function properly and to flush out any debris in the supply line then check all connections for leaks and turn off the water.




STYLE No. OTPF20, OT20PF

On Tap Deck Mounted Articulated Pot Filler with Metal Wheel Handle

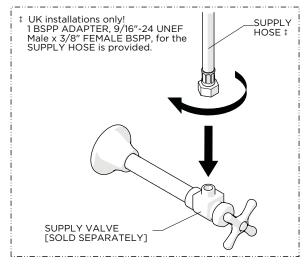


 Connect the SUPPLY HOSE to the SUPPLY VALVE (sold separately) making sure it is not pinched/kinked.

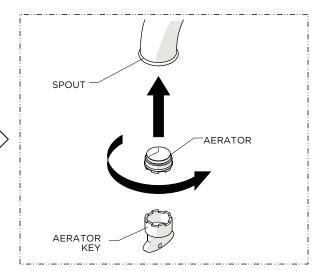


6. Re-install the AERATOR.

INSTALLATION GUIDELINES

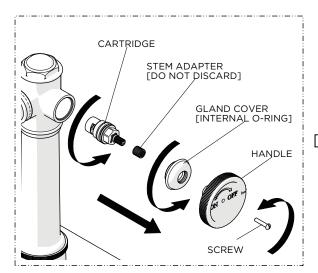


SERVICING THE CARTRIDGE:

 Remove the SCREW, HANDLE and GLAND COVER to expose the CARTRIDGE then unthread and remove the CARTRIDGE using a 21/32" [17mm] SHOWER VALVE SOCKET WRENCH.

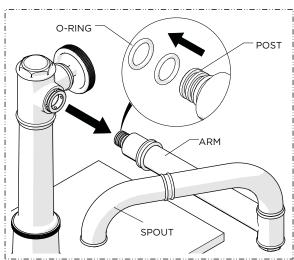

2. Remove the ARM to expose the POST and access the O-RINGS.

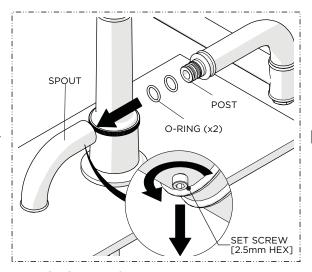


SERVICING THE SPOUT:

 Loosen, but do NOT remove, the SET SCREW using a 2.5mm HEX KEY then remove the SPOUT to expose the POST and access the O-RINGS.



STYLE No. OTPF20, OT20PF

On Tap Deck Mounted Articulated Pot Filler with Metal Wheel Handle

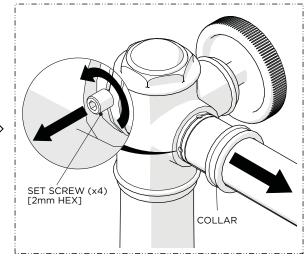

SERVICING THE ARTICULATED ARM:

 Slide the COLLAR up to expose the SET SCREWS then loosen, but do NOT remove, the SCREWS using a 2mm HEX KEY.