

990, 990-11 Bedpan Storage Cabinet

Installation


990 Recessed Bedpan Storage Cabinet

Coordinate installation with architect and contractor to avoid protrusion from opposite wall, pipes vent, conduits, electrical wiring etc. in wall. Grounding is recommended for plaster wall installation. If installing where unit projects above top of wainscot, provide aluminum channel or other filler to prevent gap from finished wall and flange of unit. For block walls, use metal expansion shields (not provided).

1. Rough-in a 15-5/8" wide x 26-7/16" high wall opening.
2. Position the unit into the opening and unlock the door.

Shims may be required to prevent distortion when positioning the unit into the wall opening. Place shims at the mounting holes between the outside of the unit and the wall before securing the towel/waste unit.

3. Secure the unit to wall through the concealed mounting holes provided with the four #10 screws provided.

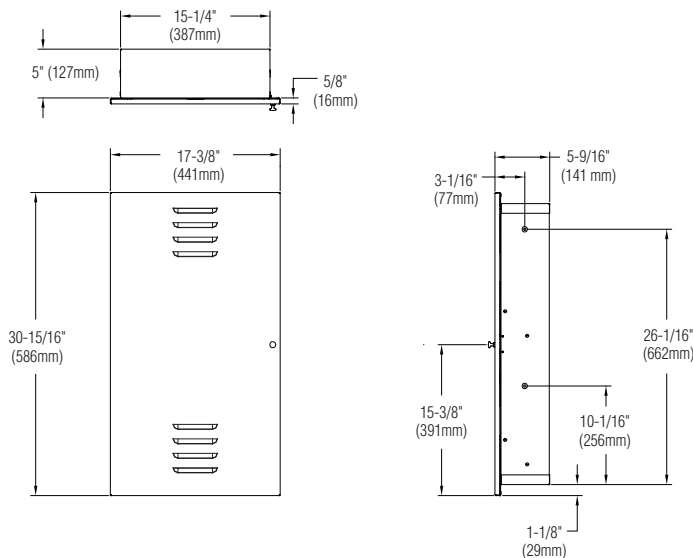

990-11 Surface-Mounted Bedpan Storage Cabinet

1. Plaster or dry wall construction: Provide in-wall backing (suitable for use with #10 x 1" screws) at the mounting slot locations shown in Figure 2 below.

Other wall surfaces: Provide fiber plugs or expansion shields (suitable for use with #8 x 1-1/4" sheet-metal screws supplied by installer), OR provide 1/8" toggle bolts or expansion bolts.

If installing where unit projects above top of wainscot, provide aluminum channel or other filler to prevent gap from finished wall to back of unit. For block walls, use metal expansion shields (provided by installer).

2. Unlock and open the door. Secure the unit to the wall with hardware appropriate for your wall construction (hardware supplied by installer).

