



California Faucets®

ZeroDrain™

9229Z

Integral Overflow Tub Drain Installation Instructions


CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

For use on tubs with overflow


1 INSTALLING DRAIN ON TUB

- Tub HOLE (4) shall be $\varnothing 2-1/16''$ min with downward draft to accept underside radius on FLANGE (2)
- Remove STOPPER (1) & TAILPIECE (7) from ZeroDrain assembly for later use
- Apply thin film of silicon SEALANT (3) (or equivalent – DO NOT use petroleum-based sealant as this WILL void finish warranty) to underside of FLANGE (2)
- Insert FLANGE (2) though tub HOLE (4)
- Place GASKET (5) onto top of BODY (6)
- From underside, attach BODY (6) onto FLANGE (2) and firmly secure to lower side of tub to seal GASKET (5)

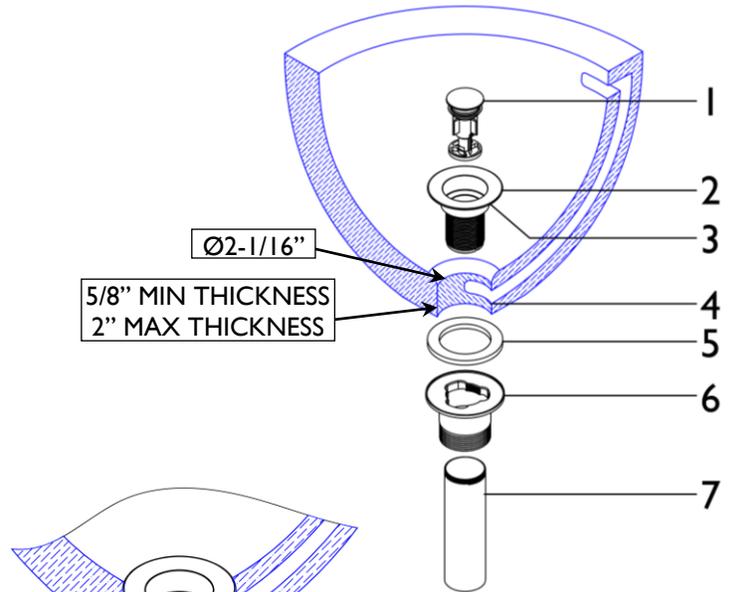

2 INSTALLING TAILPIECE

- Place TEFLON TAPE (8) onto TAILPIECE (7) and secure onto BODY (6)

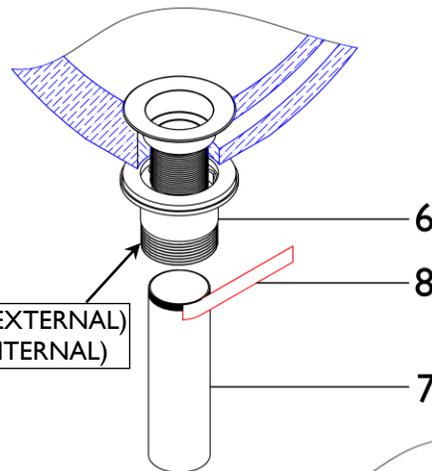

3 INSTALLING STOPPER

- Insert STOPPER (1) into FLANGE (2)

4 ATTACHING TO P-TRAP

- Slide TAILPIECE (7) into P-TRAP (9), not supplied, and secure p-trap nut for water tight seal

