


## FORMWORK

Handshower on Hook

## INSTALLATION GUIDELINES

Style No. FMHS01

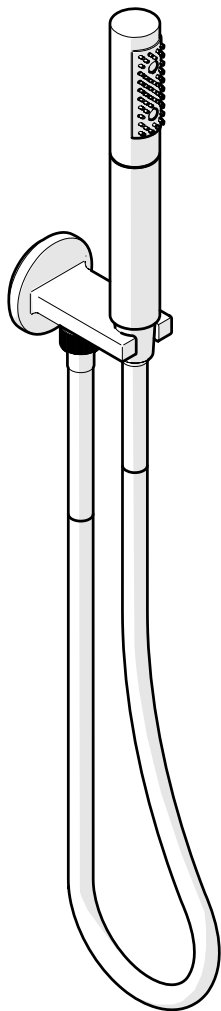

### SPECIFICATIONS:

Connection Type: 1/2" Female NPT

Recommended Pressure: 45psi

Restricted Maximum Flow Rate: 2.5gpm. For use with automatic compensating valves rated at 2.5gpm.

### IMPORTANT:

- A diverter or wall valve (sold separately) control on/off/volume and must be installed for each fitting that will have water flowing to it.
- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to federal state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.

- This product must be installed by a professional licensed contractor and must be onsite prior to rough-in, this allows the installer to visualize the installation.
- Inspect this product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain plumber's putty can stain stone or tile surfaces

### SUPPLY ELBOW INSTALL:

- See Figure - 01 for Steps 1 & 2.
1. Determine the ideal location for the Formwork Handshower and stub out of the wall with a 1/2" NPT nipple a distance of 1/4" from the finished wall.
  2. Thread the HANDSHOWER ELBOW onto the 1/2" Nipple making sure the FOAM GASKET is behind it. Note: The CHECK VALVE is located on the outlet of the handshower elbow.

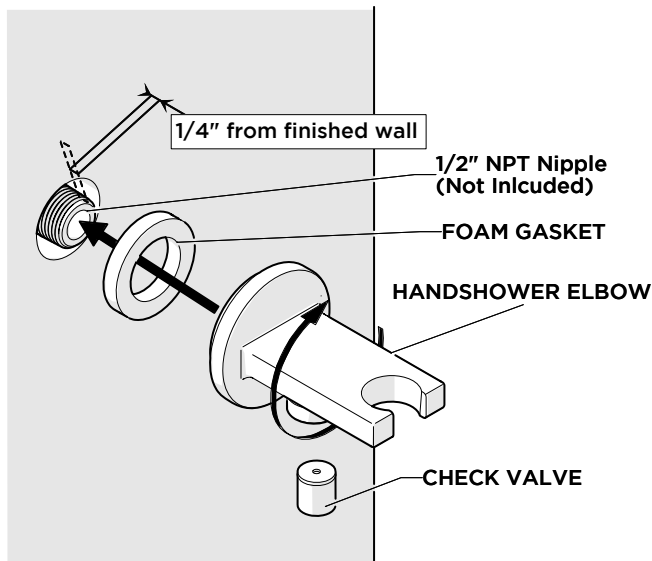


FIGURE - 01

### HANDSHOWER INSTALLATION:

- See Figure - 02 for Steps 3 & 4.
3. Connect the knurled end of the HANDSHOWER HOSE to the bottom of the HANDSHOWER ELBOW. Connect the conical end of the HANDSHOWER HOSE to the bottom of the HANDSHOWER.
  4. Place HANDSHOWER into the holder on the HANDSHOWER ELBOW.

These guidelines have been prepared for the professional contractor to aid in the installation of: FORMWORK HANDSHOWER ON HOOK (STYLE# FMHS01)  
All dimensions are based on original specification and are subject to change and variation.  
Please consult your Design Associate for current specifications.

# WATERWORKS

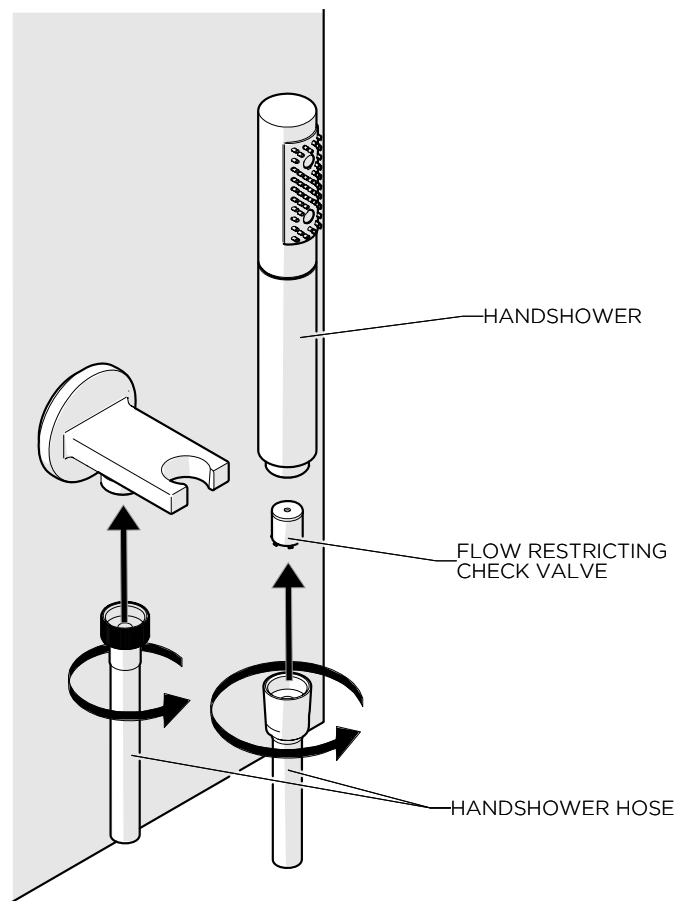


FIGURE - 02

**INSPECT THE INSTALLATION:**

5. Remove the handshower from the hose. Turn on the wall valve/diverter (sold separately) to flush out any debris in the supply line.
  6. Inspect all connections for leaks.
  7. Turn off supply and re-attach the handshower to the hose.
- Note: The FLOW REGULATING CHECK VALVE is located in the inlet of the HANDSHOWER and the CHECK VALVE is located in the outlet of the HANDSHOWER ELBOW.
  - If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).
  - See service part document for parts ordering, available on WATERWORKS.COM.

These guidelines have been prepared for the professional contractor to aid in the installation of:  
**FORMWORK HANDSHOWER ON HOOK (STYLE# FMHS01)**  
 All dimensions are based on original specification and are subject to change and variation.  
 Please consult your Design Associate for current specifications.

# WATERWORKS