HENRY CHRONOS WALL SCONCE		Installation (Guidelines
Style No. CNLTOO [CNOLT] Wall Mounted Single Sconce with Linen Shade Image: Content of the style styl	 Bulb Type Junction B Junction B Max Watt Orientatic Shade Ma Voltage: 1 Required UL: Blac "Gra CE: [Bra Striped IMPORTA WARI to insi junction powe To en read a The o inform CNLT dry lo inside of CE Be su and lo This p licens Refer attack fully co only. Max w 	e Size: E12 [E14] e: Candelabra Box Orientation: Any Box Size: Standard 4: Octago age: 60 Watt on: Wall Only iterial: Linen 120 [240] Electrical Feeds: ck "Hot" wire; White "Neutral ound" wire own "Line" wire; Blue "Neutral or Bare "Earth" wire]	" wire; Green or Bare al" wire; Green/Yellow st be turned off prior lectrical supply to the rcuit breaker. Turning icient. properly, you must ust keep this uitable for damp or can be found on the [] is CE rated. Proof d upon request. to all federal, state, a professional embly drawings assembled but shown and service purpose .T] is 60 watts for
These guidelines have been prepared for the professional contractor to aid in the installation on <u>HENRY CHRONOS WALL MOUNTED SINGLE ARM SCONCE WITH SHADE (STYLE No. CNLTO</u> All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.		WATEF	RWORKS

HENRY CHRONOS WALL SCONCE

CNLT00 [CN00LT] SCONCE INSTALLATION:

- REQUIRED: Install an electrical junction box at the desired height.
- See Figure 01 for Steps 1 6.


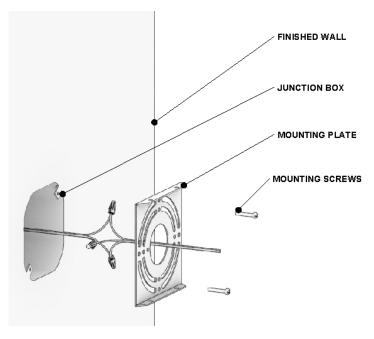


FIGURE - 01

- 1. Remove the MOUNTING PLATE by unthreading the FIXTURE MOUNTING SCREW from the back plate.
- 2. Pull the wires from the light through the center of the MOUNTING PLATE.
- 3. Fasten the bare copper fixture wire to the green or bare copper wire in the box with a wire nut or fasten it to the MOUNTING PLATE with the ground screw provided.
- 4. Fasten the white fixture wire to the white wire in the box with a wire nut. Tightly wrap the connection with electrical tape beginning 1" [25mm] below the wire nut to ensure the tape seals the end of the nut. Make sure that there are no exposed wires that could cause a short circuit.
- 5. Repeat previous step with the black fixture wire and the black wire from the junction box. Make sure the wires are pushed into the junction box.
- 6. Attach the MOUNTING PLATE to the JUNCTION BOX using the MOUNTING SCREWS making sure to keep the proper alignment of the plate.
- See Figure 02 for Step 7-9.

These guidelines have been prepared for the professional contractor to aid in the installation of: <u>HENRY CHRONOS WALL MOUNTED SINGLE ARM SCONCE WITH SHADE (STYLE NO. CNLTOO [CNOOLT])</u> All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

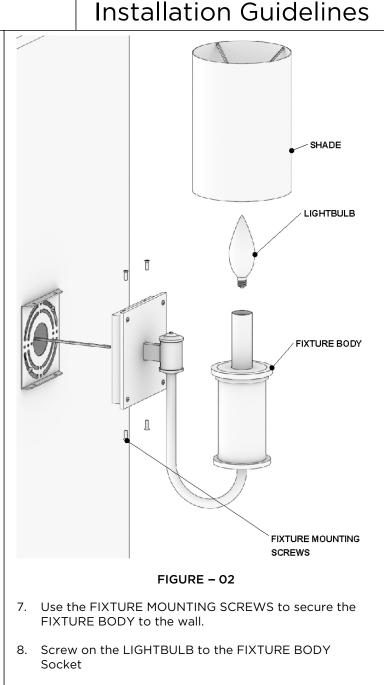

9. Secure the SHADE to the FIXTURE BODY by sliding down, on top of the LIGHTBULB

SERVICING THE LIGHT:

The LIGHTBULB is accessible without any disassembly for cleaning and servicing.

 If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).

WATERWORKS