




WATERWORKS

INSTALLATION GUIDELINES




IMPORTANT:


- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor.
- Be sure your installation conforms to all federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Inspect this product to ensure you have all the parts required for proper installation.
- This product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain plumber's putty may stain stone or tile surfaces.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.

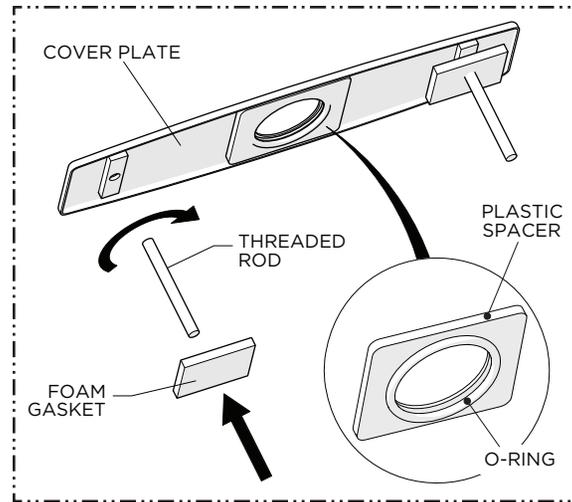

1. Thread the **THREADED RODS** into the **COVER PLATE** then slide the **FOAM GASKETS** onto the **RODS** until they contact the underside of the **PLATE**.

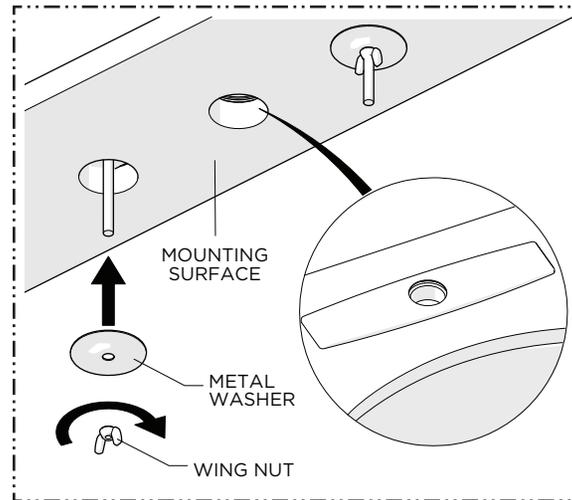


3. Attach the **METAL WASHERS** and **WING NUTS** onto the **THREADED RODS** then ensure the **COVER PLATE** is properly aligned and securely tighten the **WING NUTS**.

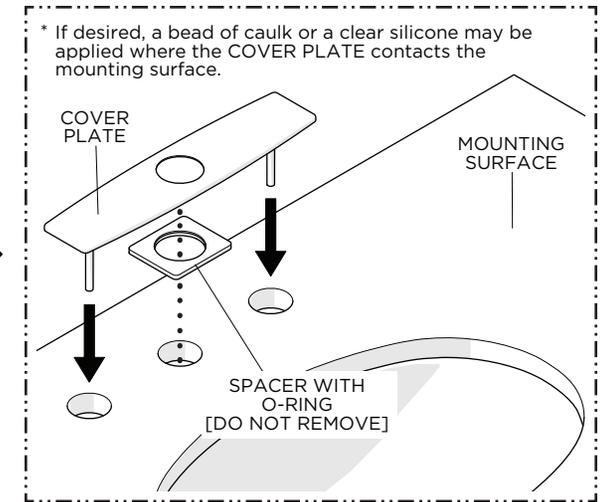

2. Insert the **THREADED RODS** into the holes on the mounting surface.

NOTE: Do **NOT** remove the **PLASTIC SPACER** and **O-RING** provided.

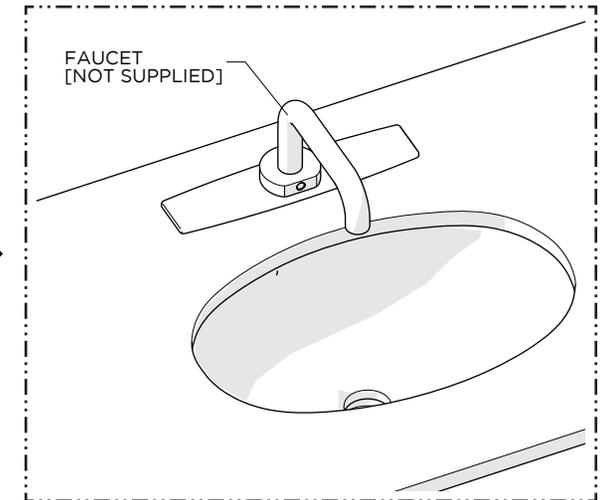

4. Proceed with **FAUCET** installation as per the manufacturer's guidelines.