


WATERWORKS INSTALLATION GUIDELINES

STYLE No. CNMR01

Henry Chronos Wall Mounted Large Rectangular Mirror

37 5/16" x 20" x 1"

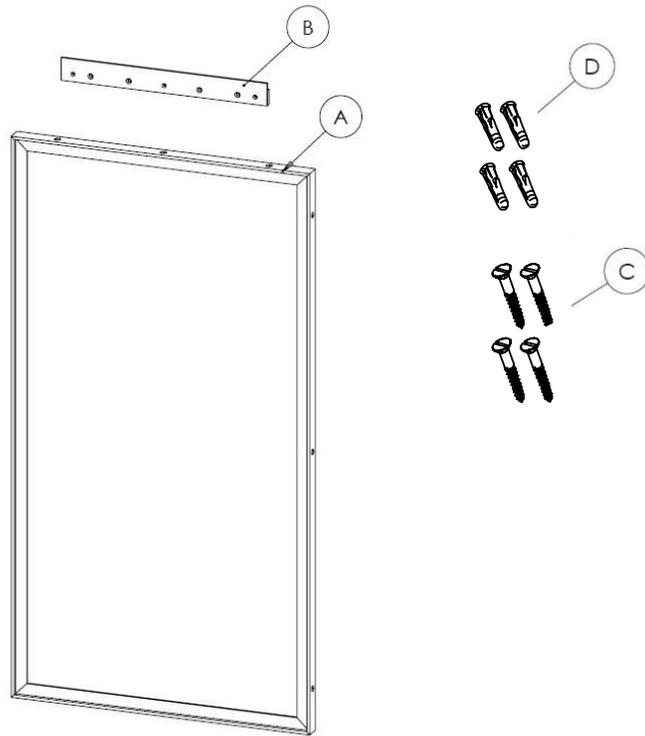

Parts Included:


- | | |
|----------------------------|-----------------------------|
| A. 1x Main Mirror Assembly | C. 4 x No. 8 2" Wall Screws |
| B. 1x Wall Hanger | D. 4 x Red Wall Anchors |

TECHNICAL DETAILS:

DETAIL	SPECIFICATION
PRIMARY MATERIAL	Brass
WEIGHT	22lbs [10KG]

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Install adequate blocking or position over a stud to properly secure the fixture.
- Inspect this product, upon receiving, to ensure it is the correct model and you have all parts required for proper installation.
- This product must be installed by a professional licensed contractor. Be sure your installation conforms to all federal, state, and local codes.
- Take all necessary precautions to ensure that this product is protected during installation.
- Before drilling the wall check for electric cables and pipes. Never drill above or below light switches or plug sockets.

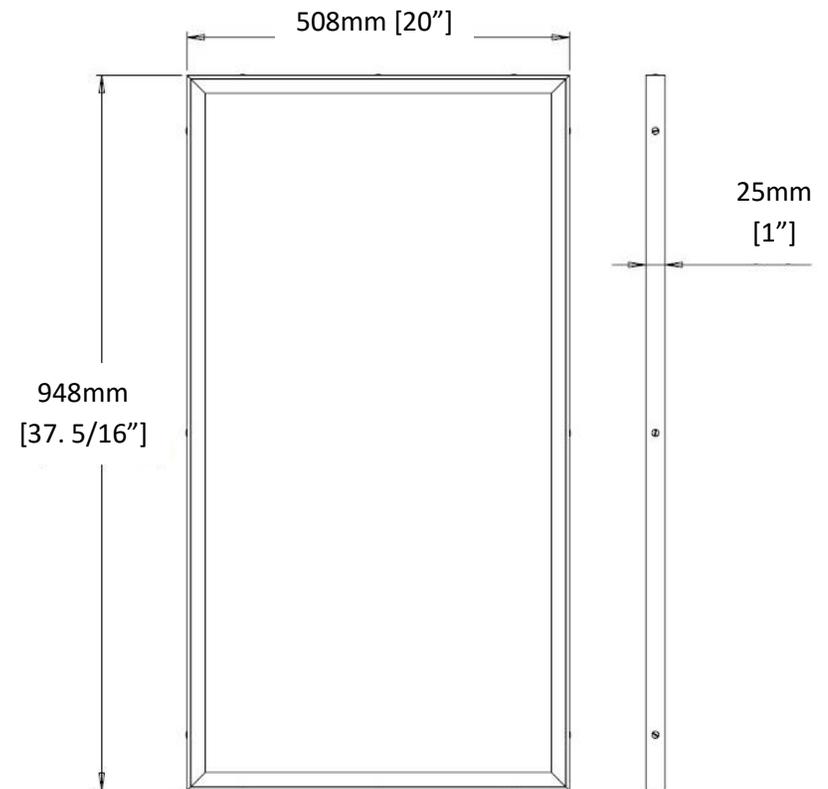


WATERWORKS INSTALLATION GUIDELINES

STYLE No. CNMR01

Henry Chronos Wall Mounted Large Rectangular Mirror

37 5/16" x 20" x 1"

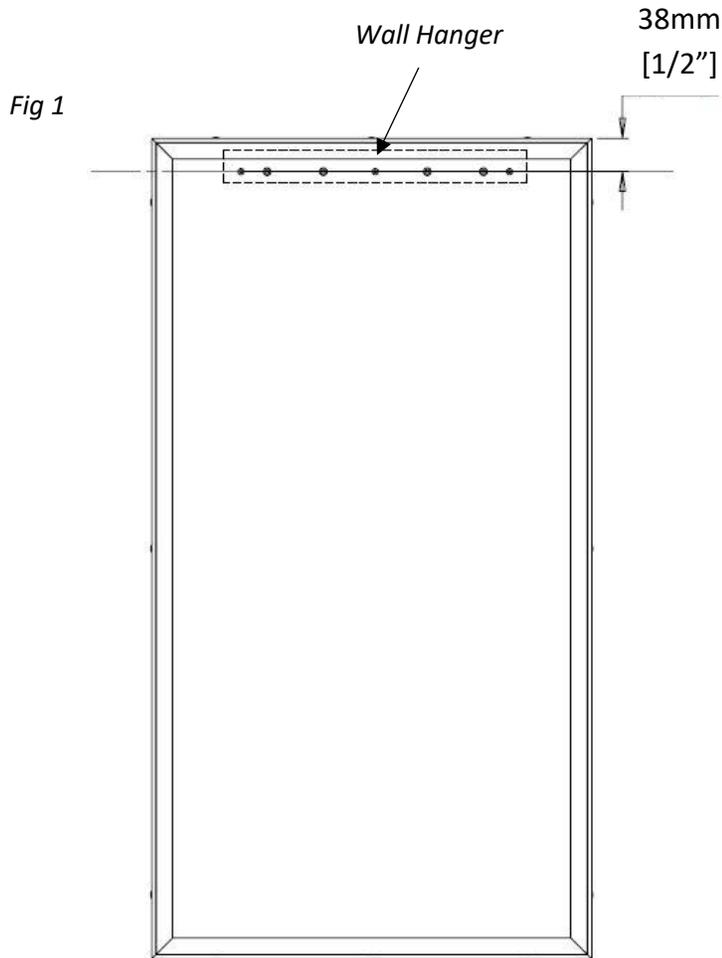

Tools needed:

Pencil, tape measure, spirit level and screwdriver or a standard drill.

Please note the below instructions and fixings provided are for a masonry wall. If you are installing to a plasterboard wall, partition, or any other wall, we recommend a timber battens or frame behind the wall for support as well as source any special screws or fixings needed.

Method of Installation

1. Using a tape measure, check the location where the mirror is to be installed. Be sure the mirror will fit in the desired location.
2. Place a soft surface like a towel underneath the working area to avoid damage to surfaces.
3. Mark with a pencil where the very top and center of the mirror need to be located.
4. From the top of the Mirror, measure down 1 1/2" and mark this spot for the height of the of the *Wall Hanger* holes. (Fig 1)
5. Place the bottom of the *Wall Hanger* on the wall and using a level to check that it is horizontal then mark the screw locations though the holes.
6. Using a drill and 7/32" drill bit, pre-drill the holes for the wall anchors. Lightly tap the wall anchors into place with a hammer.
7. Reposition the *Wall Hanger* secure with the screws provided. Check the level again to determine that it is straight and horizontal.
8. Carefully place the mirror onto the installed *Wall Hanger*. The mirror can then be adjusted side to side by gently sliding the mirror along the wall hanger to ensure the mirror is centered.