
WATERWORKS

INSTALLATION GUIDELINES

Flyte 42" Two Leg Washstand with Glass Shelf

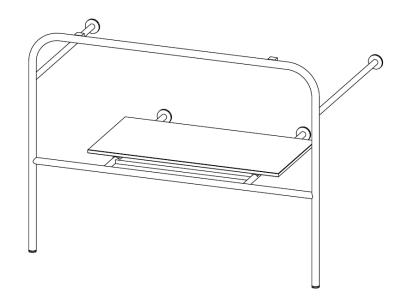



IMPORTANT:


- > To ensure this product is installed properly, you must read and follow these guidelines.
- > The owner/user of this product must keep this information for future reference.
- Install adequate blocking or position over a stud to properly secure the fixture.
- > Inspect this product, upon receiving, to ensure it is the correct model and you have all parts required for proper installation.
- > Slab top, fittings and lavatory sold separately.
- > This product must be installed by a professional licensed contractor. Be sure your installation conforms to all federal, state, and local codes.
- > Take all necessary precautions to ensure that this product is protected during installation.
- > Ensure the floor is level and the weight of this product will be adequately supported.
- > The use of certain plumber's putty may stain stone or tile surfaces.

TECHNICAL DETAILS:

DETAIL	SPECIFICATION
ADJUSTABLE LEVELERS/FEET	YES
DIAMETER OF LEGS/TUBES	1" [25mm]
PRIMARY MATERIAL	Brass
RECOMMENDED ROUGH-IN SUPPLY HEIGHT	21" [533mm]
RECOMMENDED ROUGH-IN SUPPLY SPREAD	9" [229mm]
RECOMMENDED ROUGH-IN WASTE HEIGHT	19" [483mm]
TOP ATTACHMENT METHOD	Silicone
WEIGHT	18lbs

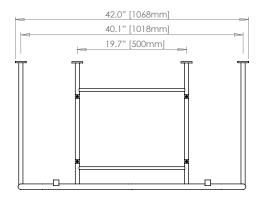


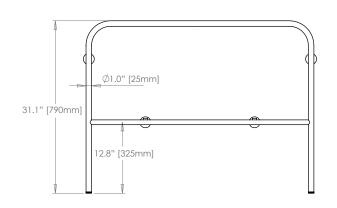

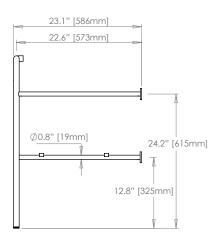


WATERWORKS

INSTALLATION GUIDELINES

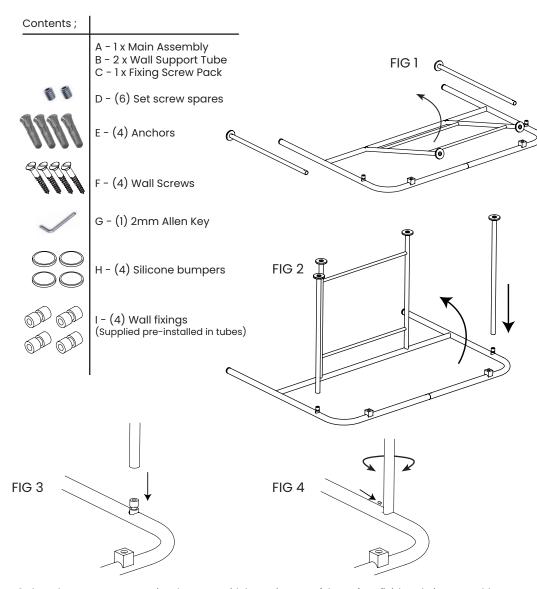

- 1. Place the parts on a protective sheet to avoid damaging any of the surface finishes during assembly.
- 2. Insert Wall Support Tubes (B) onto the leg connections as shown (Orientation identified by Left & Right Labels) (fig 3).
- 3. When fully inserted, rotate the Wall Support Tube to expose the pre-drilled fixing screw hole.
- 4. Insert the Set Screw (D) and fully tighten using a Allen Key(G).
- 5. Unfold the bottom support frame.

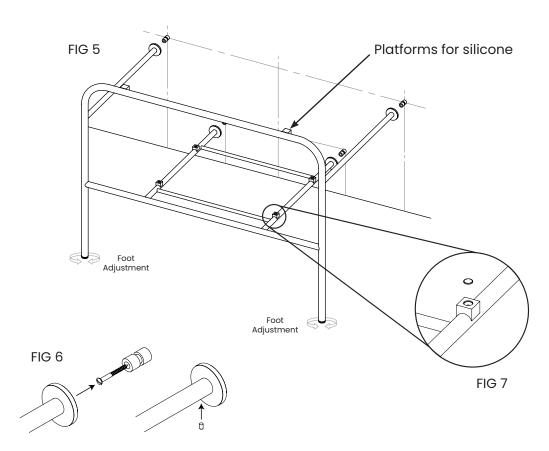

- 6. To remove the Wall Fixing Inserts, unscrew the Set Screw (D) using the 2mm Allen Key (G) and remove the inserts (I).
- 7. Measure and mark the positions for the Wall Screws.
- 8. Place a level on top of the wash stand legs and adjust the feet until level.
- 9. Mark the vertical center lines (for waste) equally on either side of the wash stand legs.
- 10. Using a pencil, mark the position of the bottom rail screw.
- 11. Using a pencil, mark the position of the top rail.
- 12. Drill holes into the wall (x 4) using a Ø7/32" drill bit. Push the Anchors (E x 4) into the drilled holes.
- 13. Using the Wall Screws (F x 4) secure the Wall Fixing Inserts (I) to the wall (fig 6). See spec drawing for wall fixing positions.
- 14. Attach the wash stand to the Wall Fixing Inserts (I) and push on fully (fig 5).
- 15. Secure the side rails to the Wall Fixing Inserts (I) by tightening the Set Screws (D) using the 2mm Allen Key (G).
- 16. Make any water connections and secure the basin in plate. Final leg adjustments can be made to support the basin.
- 17. Stick the Silicone Bumpers (H) onto the glass supports (Fig 7).
- 18. Place the glass shelf onto the bottom bars ensuring to center on the four supports platforms.