#### **STYLE No.** LDTH22, LDTH32 Ludlow Integrated Thermostatic and Diverter Trim

# $\label{eq:water} WATERWORKS\\ \textbf{INSTALLATION GUIDELINES}$


	STYLE	DESCRIPTION	REQUIRED PLUMBING DETAILS:
OFF • F F A • • • • • • • • • • • • • • • • • • •	LDTH22	Ludlow Integrated Thermostatic and Diverter Trim with Cross Handle	➢ ViaBox <sup>™</sup> 1/2" Integrated Thermostatic Valve with Two Way Diverter STYLE No. GUTH62
			➤ ViaBox <sup>TM</sup> 1/2" Integrated Thermostatic Valve with Three Way Diverter STYLE No. GUTH63
			IMPORTANT:
			> To ensure this product is installed properly, you must read and follow these guidelines.
			> The owner/user of this product must keep this information for future reference.
			This product must be installed by a professional licensed contractor and must be onsite prior to rough-in. This allows the installer to visualize the installation.
			> ALL VALVES AND TRIMS SOLD SEPARATELY.
			➤ This product is intended to work with the ViaBox <sup>TM</sup> 1/2" Integrated Thermostatic Valve with Diverter (Style No. GUTH62 or GUTH63). Refer to the Installation Guidelines provided with the VALVE for complete rough-in installation details and related information.
			Be sure your installation conforms to all federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
OFF	LDTH32	Ludlow Integrated Thermostatic and Diverter Trim with Lever Handle	WARNING: The GUTH62 and GUTH63 feature anti-scald protection. The risk of scalding exists until the installer has properly calibrated/adjusted the temperature setting during final TRIM installation.
			This product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
			> Inspect this product to ensure you have all the parts required for proper installation.
			> Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
			The use of certain plumber's putty may stain stone or tile surfaces.
			If this product will remain unused for an extended period of time (over 3 months), then the water to the THERMOSTATIC VALVE should be shut off (via service stops or system control valve) and the INTEGRATED DIVERTER VALVE should be opened to allow the water in the THERMOSTATIC VALVE to evaporate. This is to keep the THERMOSTATIC CARTRIDGE from being exposed to stagnant or hard water, which can cause the VALVE to malfunction.
			<ul> <li>If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am – 6pm EST.</li> </ul>
			Refer to the separate Service Parts Documents for available replacement parts.
_			

### WATERWORKS **INSTALLATION GUIDELINES WITH GUTH62**

Ludlow Integrated Thermostatic and Diverter Trim

#### VALVE FUNCTION AND HANDLE OPERATION:

- The THERMOSTATIC VALVE only mixes hot and cold water, it does not have an on/off/volume control function. Mixed water flows out at a fixed volume to the INTEGRATED DIVERTER VALVE which has 3 positions.
  - 2 ON positions that can direct water flow to a MAXIMUM of 2 devices. Water CANNOT flow out of the devices simultaneously (i.e. out of the shower head AND handshower together).
  - 1 OFF position that shuts the water off to all devices.
  - The INTEGRATED DIVERTER VALVE incorporates tactile feedback at each position.

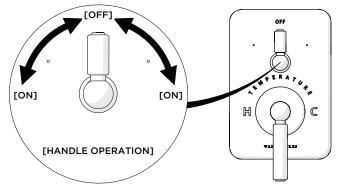


А

t

#### **ROUGH-IN AND VALVE PREPARATION:**

- The VALVE is provided with pre-installed FLUSH PLATES. The CARTRIDGES, RETAINING NUTS, and THREADED TUBE are packaged separately and provided with the VALVE.
- > **IMPORTANT:** Make sure the supply lines are flushed prior to final TRIM installation using the FLUSH PLATES provided. Refer to the Installation Guidelines provided with the VALVE for further information.
- > **CAUTION:** The rough-in depth is measured from the centerline of the inlets to the surface of the finished wall. If the VALVE is roughed-in too shallow, the TRIM cannot be installed correctly.
- Do **NOT** remove the COVER until final TRIM installation  $\geq$ and ensure the finished wall is within the MAXIMUM and MINIMUM markings on the ViaBox™.

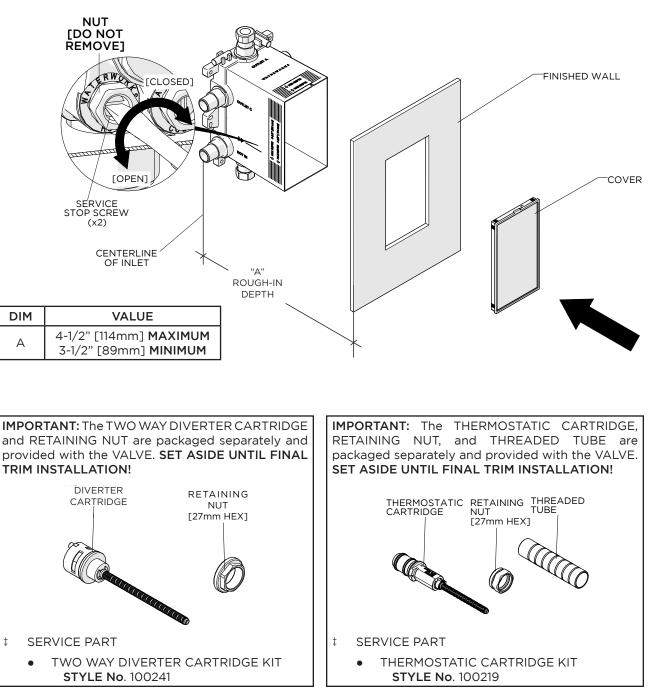


PRODUCT SUPPORT | 800.927.2120 | WATERWORKS.COM

### WATERWORKS **INSTALLATION GUIDELINES WITH GUTH63**

Ludlow Integrated Thermostatic and Diverter Trim

#### VALVE FUNCTION AND HANDLE OPERATION:

- The THERMOSTATIC VALVE only mixes hot and cold water, it does not have an on/off/volume control function. Mixed water flows out at a fixed volume to the INTEGRATED DIVERTER VALVE which has 6 positions, each at 60° apart.
  - 3 ON positions that can direct water flow to a MAXIMUM of 3 devices. Water CANNOT flow out of the devices simultaneously(i.e. out of the shower head AND handshower together).
  - 3 OFF positions that shut the water off to all • devices.
  - The INTEGRATED DIVERTER VALVE incorporates . tactile feedback at each position.

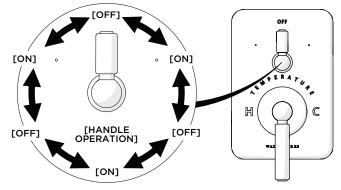


#### **ROUGH-IN AND VALVE PREPARATION:**

- The VALVE is provided with pre-installed FLUSH PLATES. The CARTRIDGES, RETAINING NUTS, and THREADED TUBE are packaged separately and provided with the VALVE.
- > **IMPORTANT:** Make sure the supply lines are flushed prior to final TRIM installation using the FLUSH PLATES provided. Refer to the Installation Guidelines provided with the VALVE for further information.
- > **CAUTION:** The rough-in depth is measured from the centerline of the inlets to the surface of the finished wall. If the VALVE is roughed-in too shallow, the TRIM cannot be installed correctly.

t


Do **NOT** remove the COVER until final TRIM installation  $\geq$ and ensure the finished wall is within the MAXIMUM and MINIMUM markings on the ViaBox™.

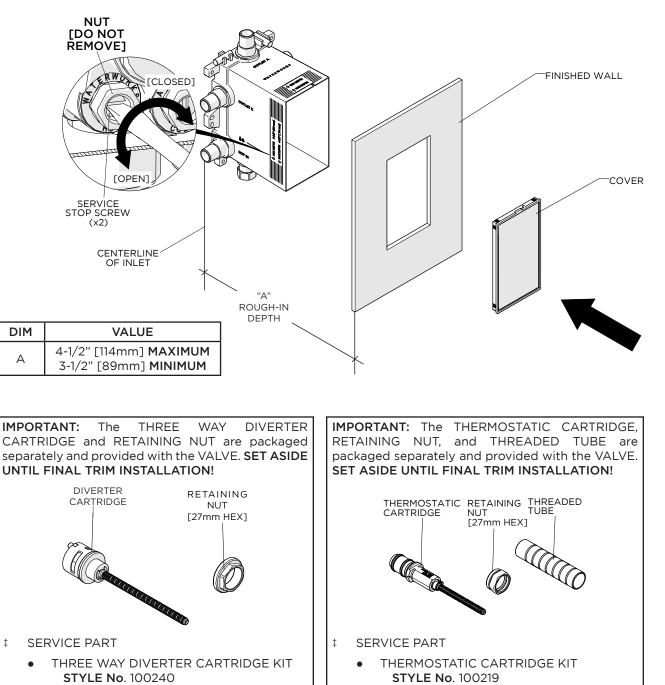


PRODUCT SUPPORT | 800.927.2120 | WATERWORKS.COM

#### STYLE No. LDTH22, LDTH32


Ludlow Integrated Thermostatic and Diverter Trim

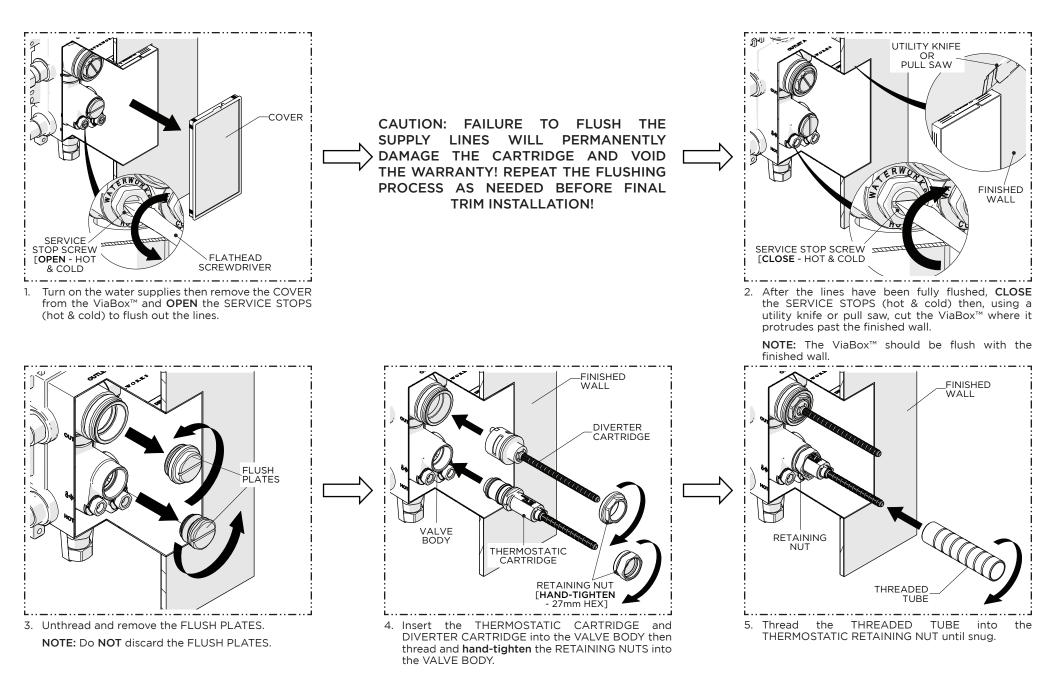


Ludlow Integrated Thermostatic and Diverter Trim

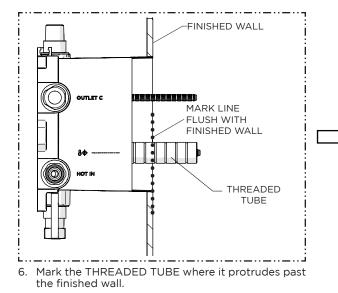


**NOTE:** A straight edge (not supplied) can be used to mark the THREADED TUBE.

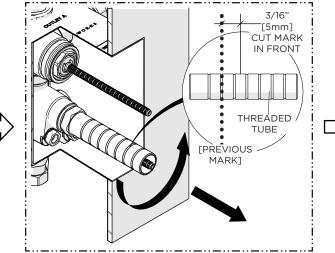


7. Remove the TUBE and cut it 3/16" [5mm] in front of the previous mark so the TUBE will protrude 3/16" [5mm] from the finished wall surface.

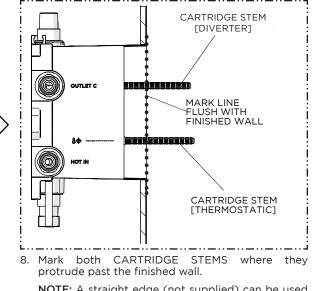


**NOTE:** A straight edge (not supplied) can be used to mark the CARTRIDGE STEMS.

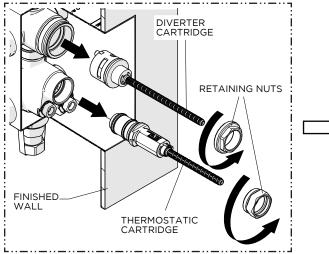

9. Unthread both RETAINING NUTS and remove both CARTRIDGES.

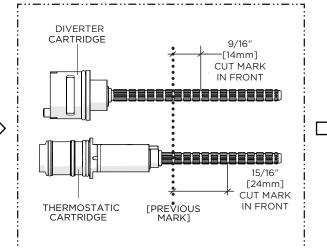


10. Carefully cut the DIVERTER STEM 9/16" [14mm] in front of the previous mark and THERMOSTATIC STEM 15/16" [24mm] in front of the previous mark so the STEMS will protrude 9/16" [14mm] and 15/16" [24mm] from the finished wall surface respectively.

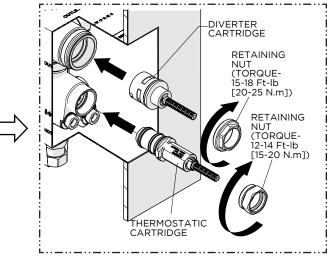

11. Insert both CARTRIDGES back into the VALVE BODY then thread and **securely** tighten the RETAINING NUTS to the specified torque settings shown.


Ludlow Integrated Thermostatic and Diverter Trim

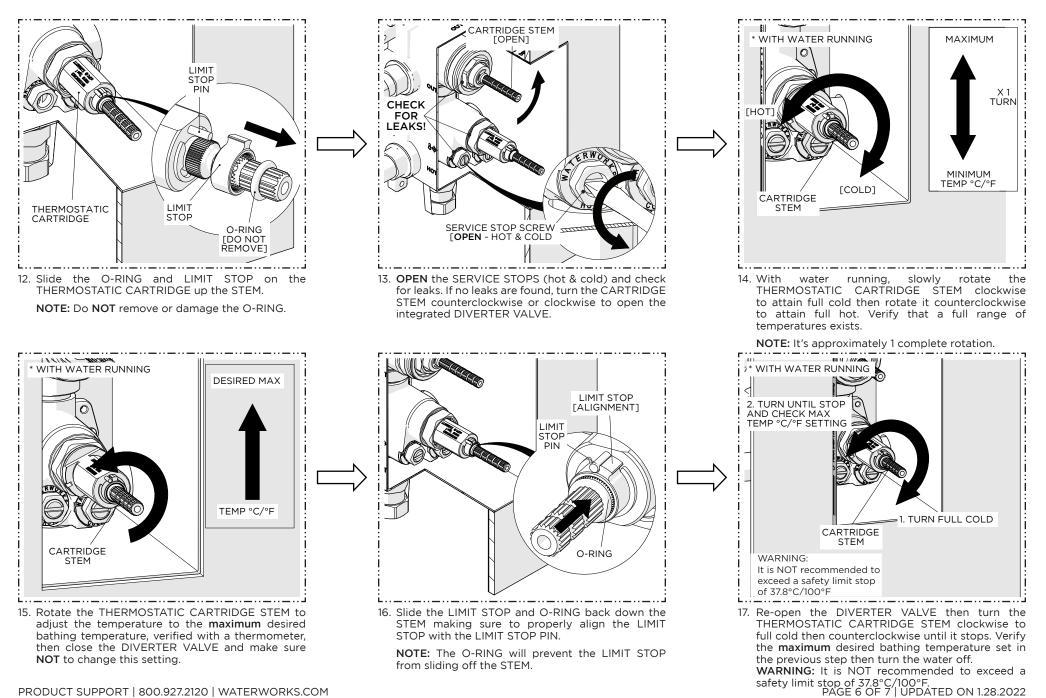


PRODUCT SUPPORT | 800.927.2120 | WATERWORKS.COM

#### STYLE No. LDTH22, LDTH32

Ludlow Integrated Thermostatic and Diverter Trim

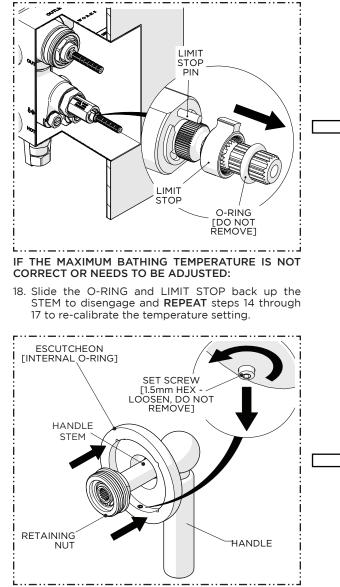


21. Loosen but do NOT remove the SET SCREW at the base of the ESCUTCHEON then slide the ESCUTCHEON up the HANDLE STEM to expose the RETAINING NUT.

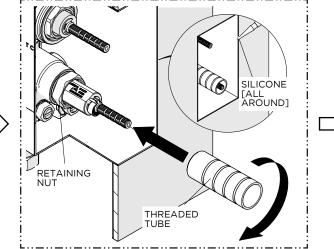


 Thread the THREADED TUBE back into the RETAINING NUT until snug.


**NOTE:** Add a bead of SILICONE where the ViaBox<sup>™</sup> contacts the finished wall.

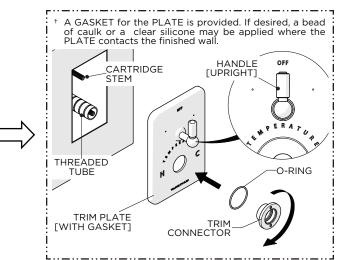

20. With the DIVERTER HANDLE in an upright vertical position, align the HANDLE with the CARTRIDGE STEM then thread and securely tighten the TRIM CONNECTOR onto the THREADED TUBE making sure to used the O-RING provided.

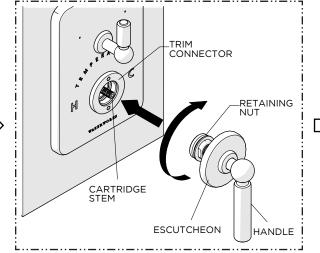

22. With the HANDLE in the desired orientation, place the HANDLE over the CARTRIDGE STEM then thread and securely tighten the RETAINING NUT into the TRIM CONNECTOR.

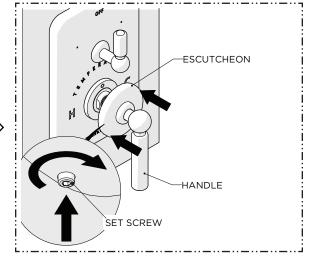

23. Slide the ESCUTCHEON down the HANDLE STEM until it stops then thread and securely tighten the SET SCREW and operate both HANDLES to ensure they function properly.